Gigaware

Start Here

16-1003

Quick Start

7” High-Resolution Digital Photo Frame

See the User’s Guide for complete instructions.

Package contents

Photo Frame

AC Adapter

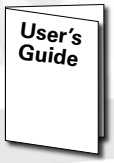

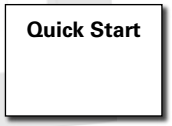

① Attach the stand and insert a memory card

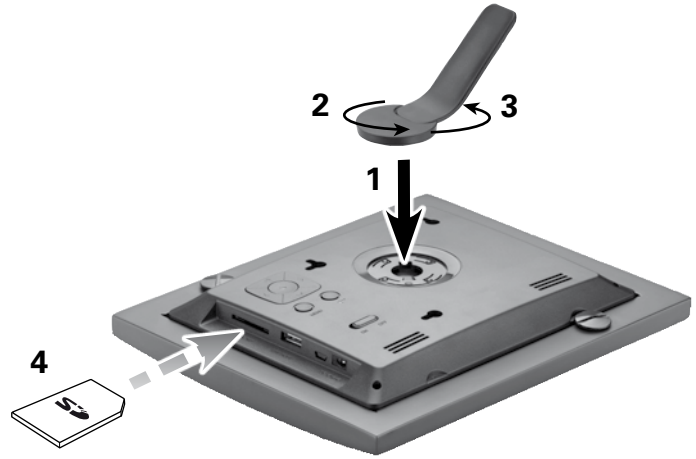

SD/MMC/MS
Insert with metallic contacts facing towards the display.

② Plug in and switch on

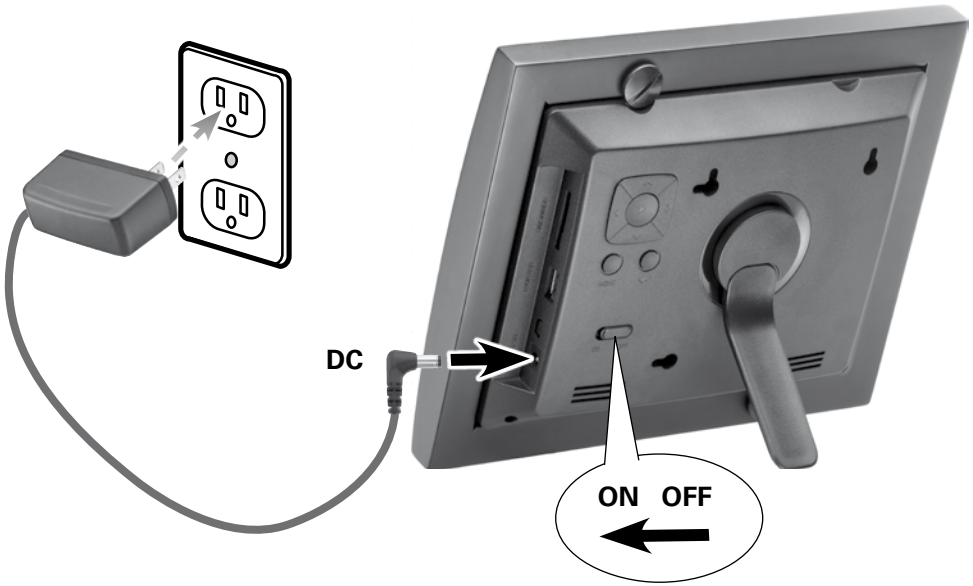

③ Select language and view your photos

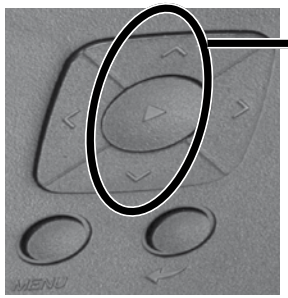

1. Select a display language using ⌄ or ⌃, then press ▶ to select: **English, Français** or **Español**.
2. Use ⌄ or ⌃ and ▶ to select **Yes** or **No**.
3. The frame enters Slide Show mode after several seconds.

© 2009. Ignition L.P. All rights reserved.
Gigaware is a trademark used by Ignition L.P.

Printed in China 09A09 16-1003